

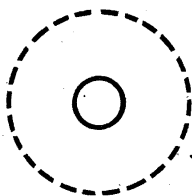


Use #10 Flat Head
WOOD SCREWS
1 1/2" Long
Drill Holes
No More Than 1/2" Deep
Using 1/8" Drill





USE 1" WOOD BIT
TO DRILL HOLE THROUGH TABLE TOP

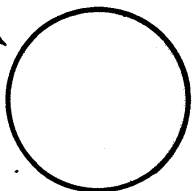

*10 Flat Head
WOOD SCREWS
1 1/2" Long
Drill Holes



USE 1/8"
DRILL



DOTTED LINE
SHOULD BE
ALIGNED WITH
CENTER OF
MOTOR PULLEY

FRONT

BONIS PART No.702